
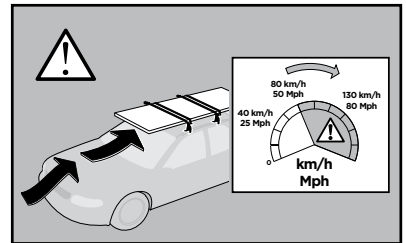
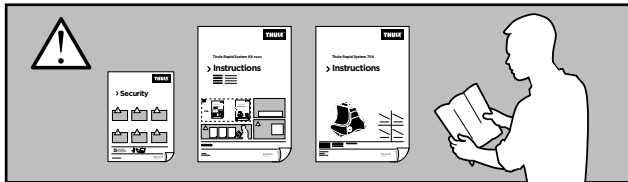
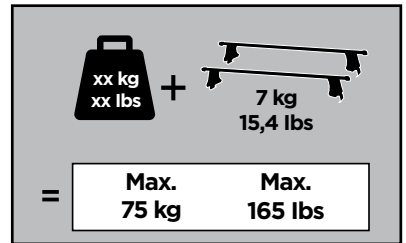


# Thule Rapid System Kit 1111

# > Instructions

**VOLVO S80**, 4-dr Sedan, 98-06 / \*99-06

\*North America

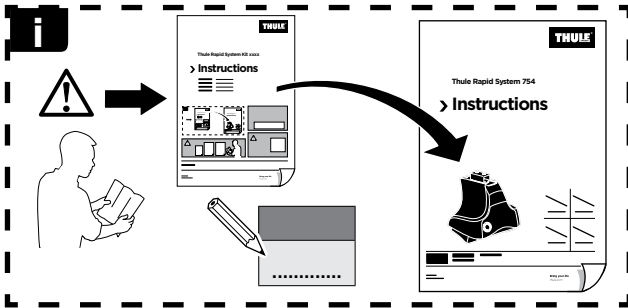

ISO 11154-E

141111


C.20121003  
519-1111-02

Bring your life

thule.com



58 x4




148 x2



x1





324 x2



x1

1


	X (scale)	X (mm)	X (inch)
<b>VOLVO S80</b> , 4-dr Sedan, 98-06 / *99-06	44	1091	43

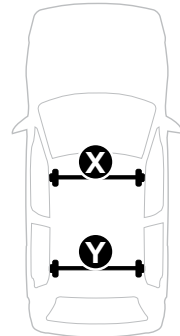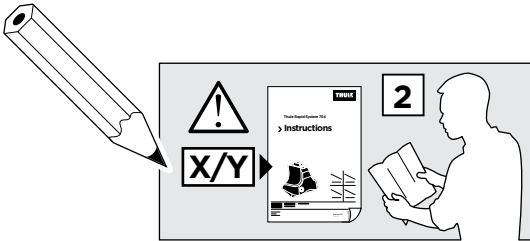


	Y (scale)	Y (mm)	Y (inch)
<b>VOLVO S80</b> , 4-dr Sedan, 98-06 / *99-06	38	1031	40 <sup>5</sup> / <sub>8</sub>

**2**

**VOLVO S80, 4-dr Sedan, 98-06 / \*99-06**

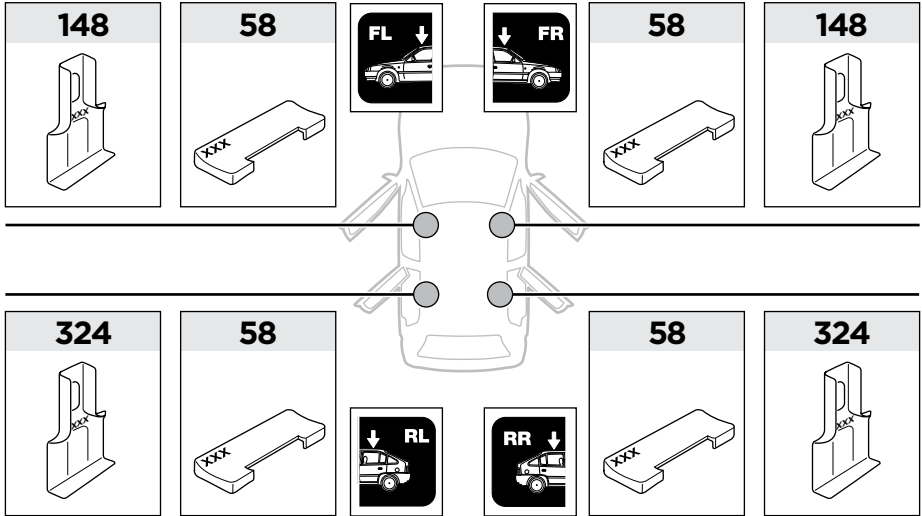

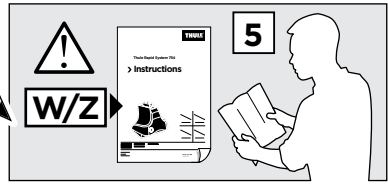**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>VOLVO S80, 4-dr Sedan, 98-06 / *99-06</b>	<b>200</b>	<b>700</b>	<b>7 <sup>7</sup>/<sub>8</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>

